


SIDE-MOUNTED PREAMP CONTROLS

The side-mounted preamp combines an under-saddle pickup with an internal microphone, three-band EQ, volume control and built-in chromatic tuner.

Mic: Controls the level of the internal microphone. Blend it with the under-saddle pickup to add more of the guitar's natural acoustic character and body resonance. Higher microphone levels may increase the risk of feedback when playing at louder volumes.

Bass: Boosts or cuts low frequencies.

Tuner: Press and hold the Tuner button to switch on the built in chromatic tuner. The display will illuminate and the pickup output will be muted while the tuner is active.

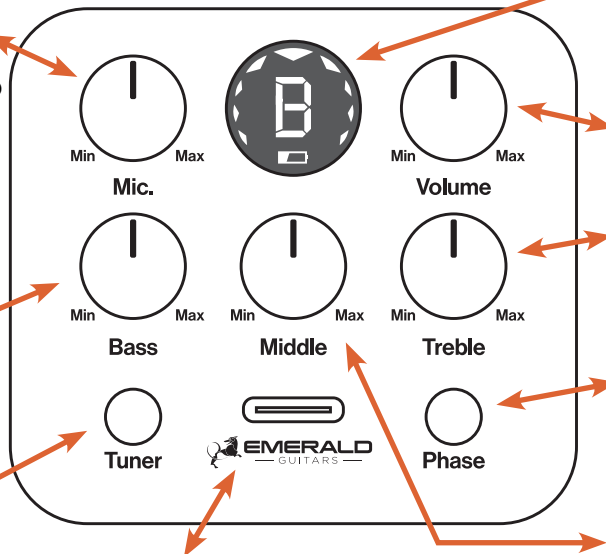

USB-C Port: Used to charge the preamp's internal rechargeable battery.

Tuner Display: Shows the nearest detected note when an individual string is played and indicates whether the note is sharp or flat. When the centre indicator illuminates green, the string is in tune. The display also shows the remaining charge level of the preamp's internal battery.

Volume: Controls the overall output level of the pickup system.

Treble: Boosts or cuts high frequencies.

Phase Button: Reverses the phase of the output signal by 180 degrees. This can help reduce feedback and phase-related issues in certain playing environments. Try both settings and select the one that provides the fullest sound with the least feedback.

Middle: Boosts or cuts midrange frequencies.

To switch the tuner off, press and hold the Tuner button again for a few seconds. The display will briefly illuminate before switching off, and the pickup output will be restored.

When the battery is running low, the red battery indicator will flash when the tuner is switched on or off. You can also check the battery status at any time by briefly pressing the Tuner button.